



神田校舎 10号館 1階・2階

1階

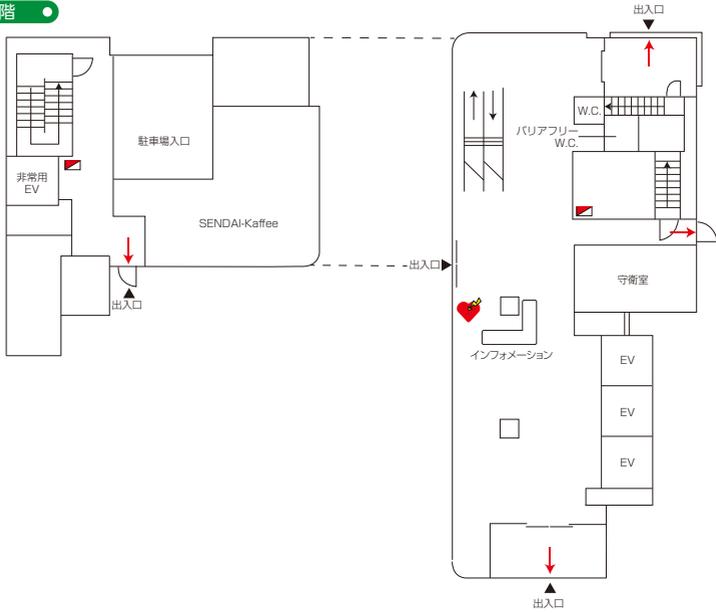


2階

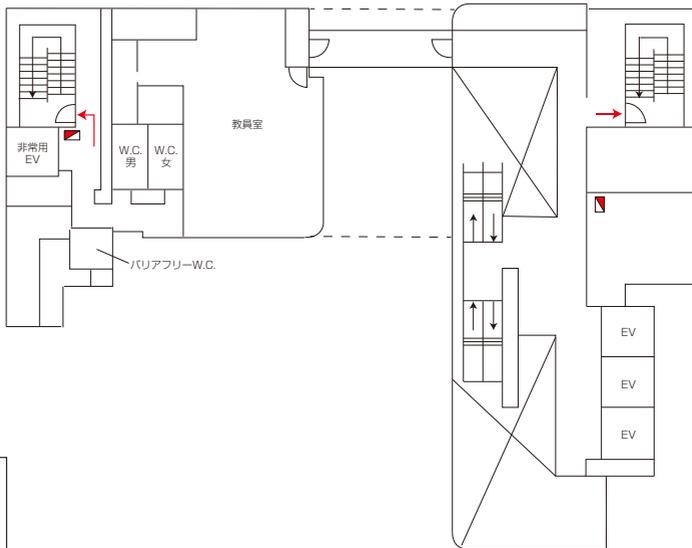


消火栓	
避難器具	
避難	
A E D	

神田校舎 10号館 3階～6階


3階

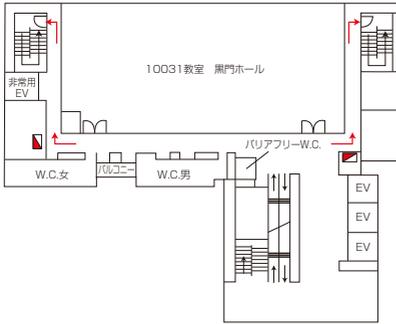


5階

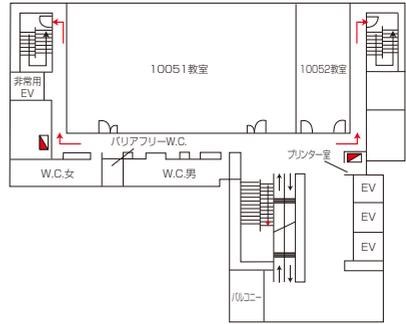

4階

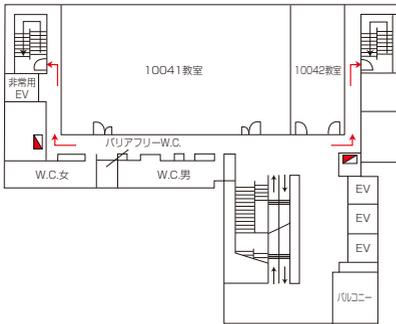

6階

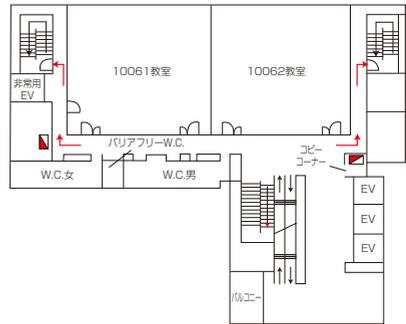


教室	定員
10031	400
10041	302
10042	75
10051	302
10052	75
10061	180
10062	180




神田校舎 10号館 11階～14階


11階

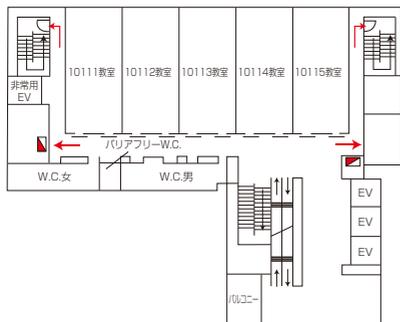


13階

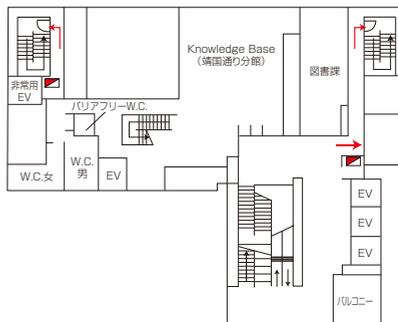

12階

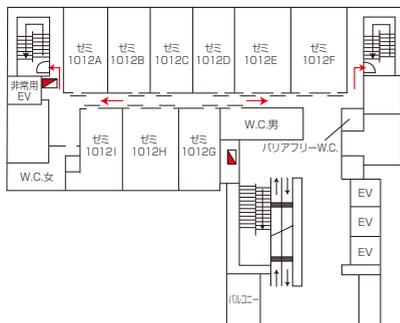

14階

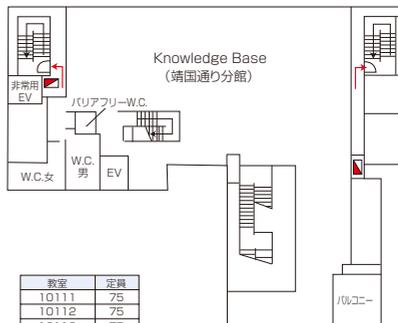


教室	定員
10111	75
10112	75
10113	75
10114	75
10115	75
ゼミ1012A	28
ゼミ1012B	28
ゼミ1012C	28
ゼミ1012D	28
ゼミ1012E	36
ゼミ1012F	36
ゼミ1012G	28
ゼミ1012H	36
ゼミ1012I	28




神田校舎 10号館 15階・16階

15階

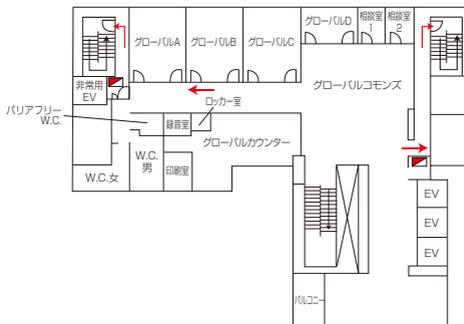

16階

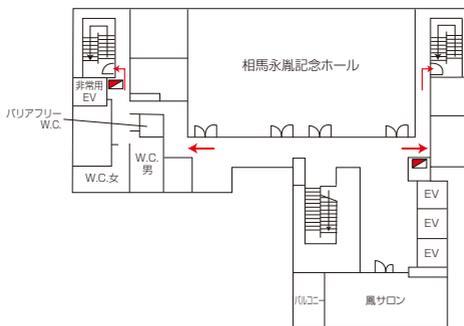

消火栓	
避難器具	
避難	
A E D	